How to check the firmware version and uptime of AP

The device information displays the AP details, including the model's name, firmware version, device MAC address, system uptime, and date. You can follow the steps below to retrieve the device information.

1. Access the device settings menu via Ethernet.
   (1) Configure your PC's IP setting to static and then set the IP address to any address from 192.168.19.2 to 192.168.19.250
   (2) Connect your PC's network port to the device WAN port.
   (3) Enter the IP address 192.168.19.1 in your browser.
   (4) In the PRISM login screen use the following login:
   Username: prism
   Password: prism

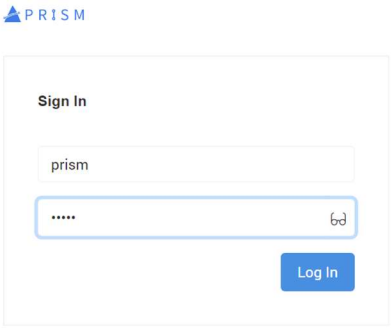

Note:
1. If the device IP address and username/password have been changed, please use the new IP address and username/password to login.
2. You can refer to the Quick Start Guide for more information on how to login device.

2. After logging into the device's web GUI, click on Dashboard/Site to display the device information. From there, you can access details such as the firmware version, device MAC address, uptime, and other relevant information about the AP.

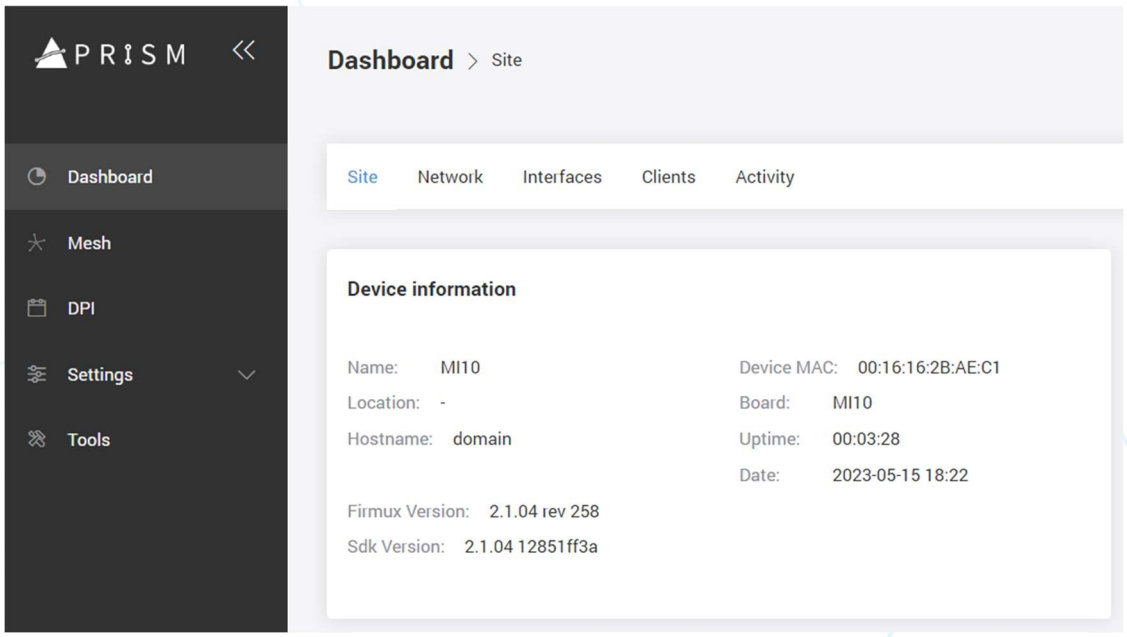
PRISM
Dashboard
Mesh
DPI
Settings
Tools
Dashboard > Site
Site
Network
Interfaces
Clients
Activity
Device information
Name: MI10
Location: -
Hostname: domain
Device MAC: 00:16:16:2B:AE:C1
Board: MI10
Uptime: 00:03:28
Date: 2023-05-15 18:22
Firmux Version: 2.1.04 rev 258
Sdk Version: 2.1.04 12851ff3a