How to check the WAN IP LAN IP and DHCP leased IP address

WAN (Wide Area Network) is used to connect with other networks, such as the Internet. It forwards data from internal LAN devices. LAN (Local Area Network) is used to connect the internal local network, including devices like laptops, mobile phones, and TVs. You can follow the steps below to retrieve network information.

1. Access the device settings menu via Ethernet.
   (1) Configure your PC's IP setting to static and then set the IP address to any address from 192.168.19.2 to 192.168.19.250
   (2) Connect your PC's network port to the device WAN port.
   (3) Enter the IP address 192.168.19.1 in your browser.
   (4) In the PRISM login screen use the following login:
   Username: prism
   Password: prism

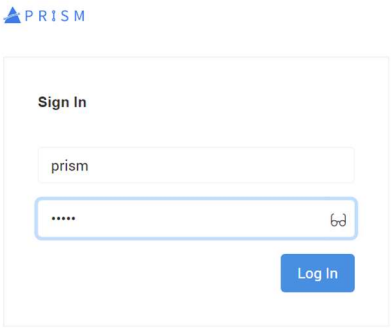

Note:
1. If the device IP address and username/password have been changed, please use the new IP address and username/password to login.
2. You can refer to the Quick Start Guide for more information on how to login device.

2. After logging into the device's web GUI, click on Dashboard/Network to display the device's network information. You can check the WAN IP address in the Internet field and the LAN IP address in the Local Network field.

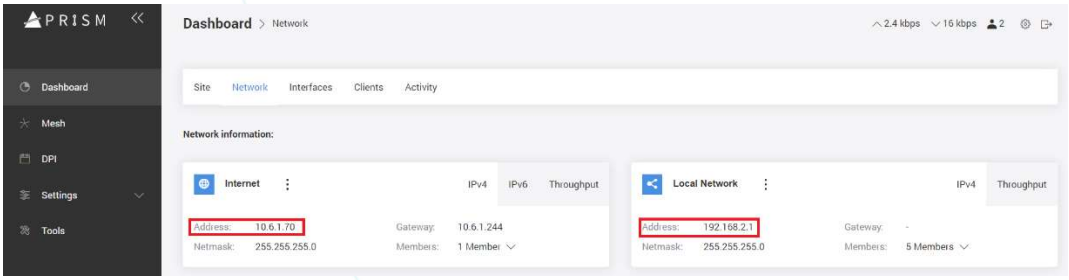

Note: "Internet" and "Local Network" are the default network zone names. If you have modified these names before, they will be displayed accordingly.
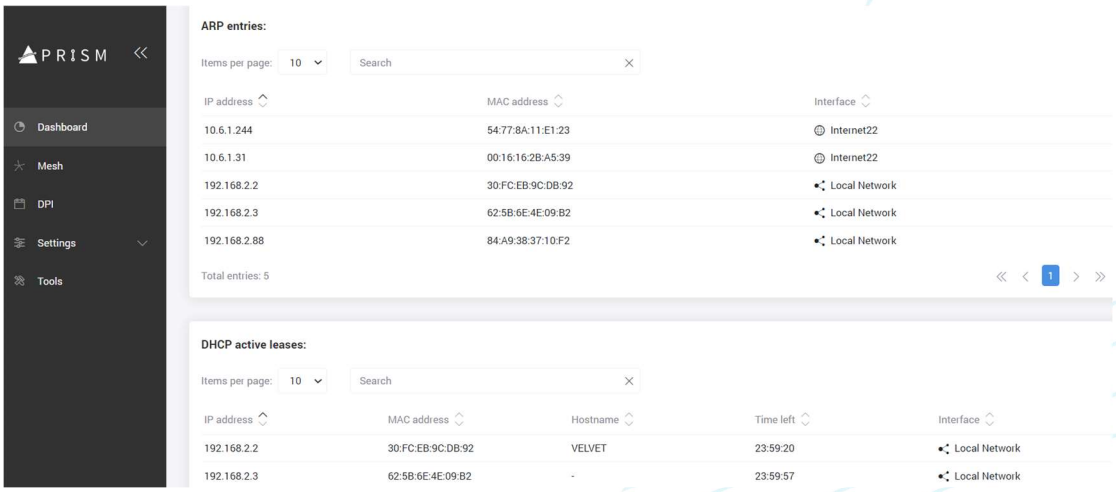
3. If you have enabled the DHCP server on the Local Network, you can check the DHCP client lease information in the DHCP active leases field. This information includes the IP address, MAC address, lease time, and interface.