How to setup LAN IP address and disable DHCP server of AP

LAN (Local Area Network) is used to connect the internal local network devices, such as laptops, mobile phones, and TVs. The MI10/MO10 devices support a DHCP server for the LAN. You can follow the steps below to set up the LAN IP address for the device.

1. Access the device settings menu via Ethernet.
   (1) Configure your PC's IP setting to static and then set the IP address to any address from 192.168.19.2 to 192.168.19.250
   (2) Connect your PC's network port to the device WAN port.
   (3) Enter the IP address 192.168.19.1 in your browser.
   (4) In the PRISM login screen use the following login:
   Username: prism
   Password: prism

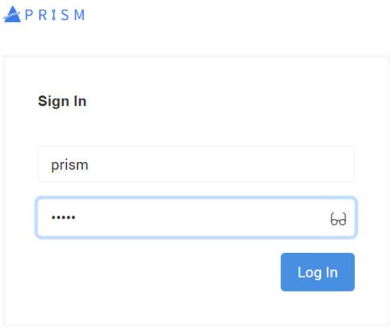

Note :
1. If the device IP address and username/password have been changed, please use the new IP address and username/password to login.
2. You can refer to the Quick Start Guide for more information on how to login device.

2. After logging into the device's web GUI, click on Settings/Network to access the Network Zone settings page.

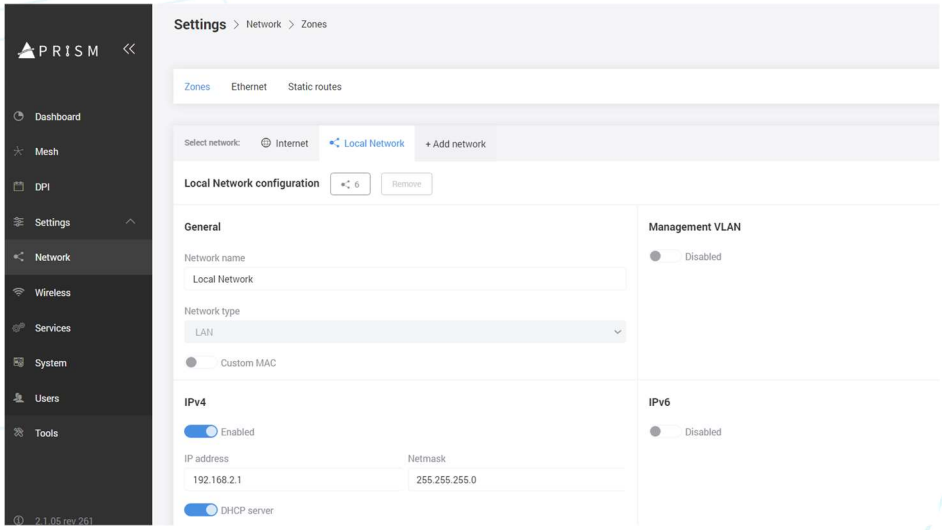

3. Click on the "Local Network" tab to configure the LAN IP address settings.
   You can enter the desired IP address for the LAN network zone. If you want to set up a DHCP server for the LAN network zone, you can enable the DHCP server function and configure the IP range and lease time settings. If you don't need a DHCP server for the LAN network zone, you can simply disable it by clicking the corresponding button.

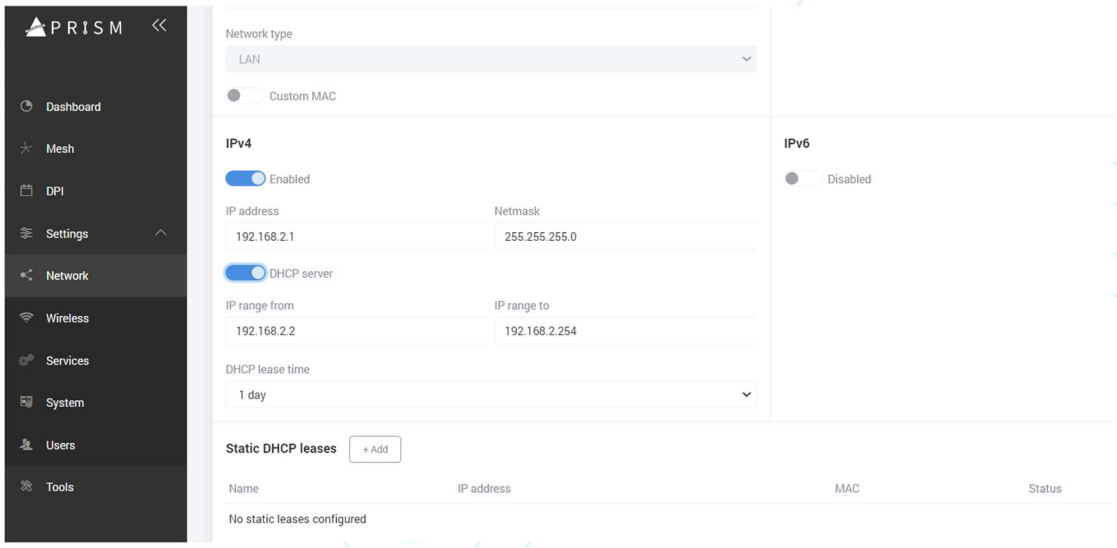

Note: If needed, you can also set up an IPv6 address by enabling IPv6.