How to add or remove network zone

A network zone is a configurable boundary that allows you to control access to computers and devices in your organization based on the IP address requesting access. In addition to the default Internet and Local Network zones, you can add up to 8 additional network zones for MI10/MO10. You can follow the steps below to add or remove a network zone for the device.

1. Access the device settings menu via Ethernet.
   (1) Configure your PC's IP setting to static and then set the IP address to any address from 192.168.19.2 to 192.168.19.250
   (2) Connect your PC's network port to the device WAN port.
   (3) Enter the IP address 192.168.19.1 in your browser.
   (4) In the PRISM login screen use the following login:
   Username: prism
   Password: prism

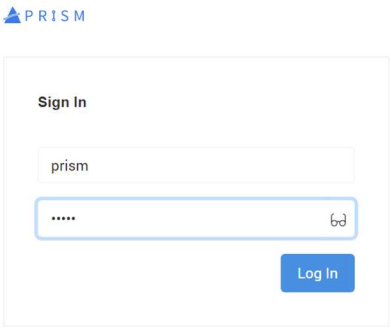

Note:
1. If the device IP address and username/password have been changed, please use the new IP address and username/password to login.
2. You can refer to the Quick Start Guide for more information on how to login device.

2. After logging into the device's web GUI, click on Settings/Network to access the Network Zone settings page.
3. Click on "Add network" to create a new network zone.

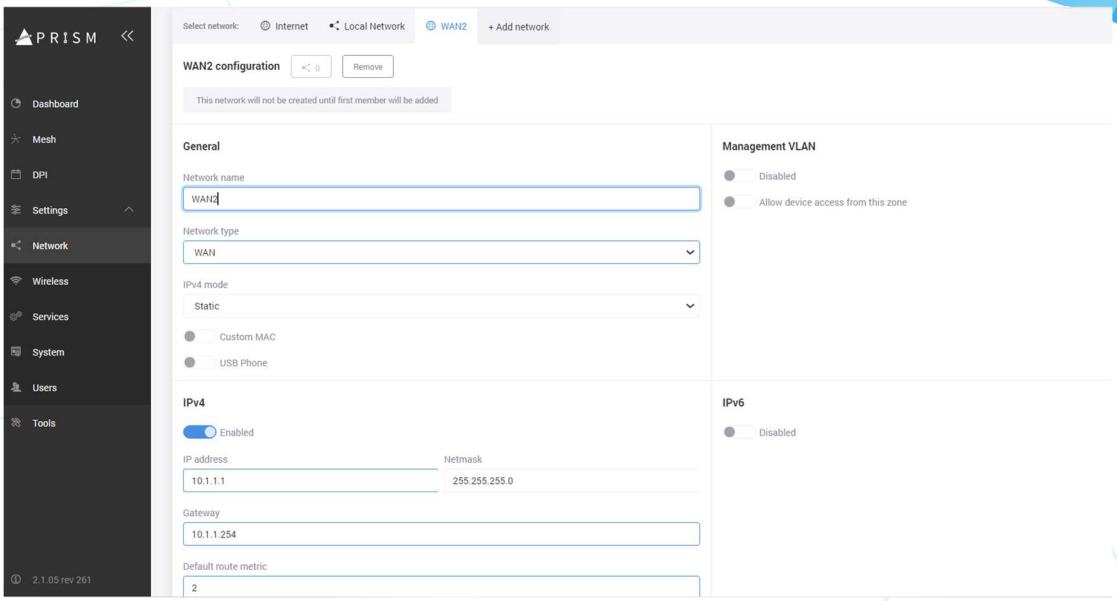

4. You can enter a network name to identify the network zone and select the network type as WAN or LAN for this new network zone.
5. Please also enter the valid IP address information for this network zone.

   Note: If there are two or more network zones set as WAN, you need to set up a route metric for each network zone to determine their priority. The route metric is a numerical value, where a lower number indicates a higher priority. Setting the metric as 0 will give the network zone the highest priority.

6. If you want to remove a network zone, click on the relevant network zone sheet and press the "Remove" button to delete the network zone.

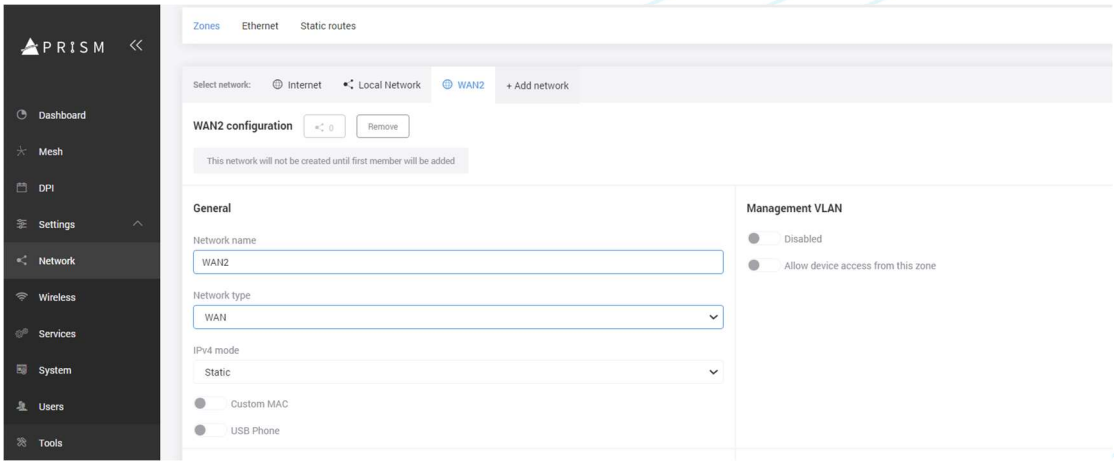

Note: Before removing a network zone, please ensure that the network zone does not contain any interfaces (including Ethernet and wireless interfaces). If there are still interfaces associated with the network zone, it will not be possible to remove it.