How to assign network zone for Ethernet port

A network zone is a configurable boundary that allows you to control access to computers and devices in your organization based on the IP address requesting access. In addition to the default Internet and Local Network zones, you can add up to 8 additional network zones for MI10/MO10. You can follow the steps below to assign the Network Zone to the Ethernet port of the device.

1. Access the device settings menu via Ethernet.
   (1) Configure your PC's IP setting to static and then set the IP address to any address from 192.168.19.2 to 192.168.19.250
   (2) Connect your PC's network port to the device WAN port.
   (3) Enter the IP address 192.168.19.1 in your browser.
   (4) In the PRISM login screen use the following login:
   Username: prism
   Password: prism

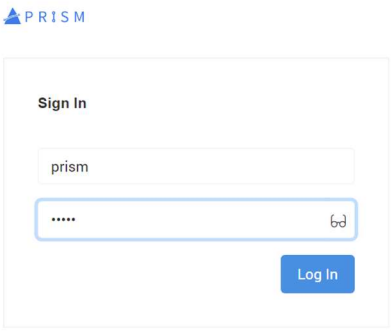

Note:
1. If the device IP address and username/password have been changed, please use the new IP address and username/password to login.
2. You can refer to the Quick Start Guide for more information on how to login device.

2. After logging in to the device's web GUI, navigate to the Settings/Network/Ethernet to access the Ethernet settings page.
3. Select the network zone for the Ethernet port of the device. By default, there are two network zones available: "Internet" and "Local Network". If you want to assign a different network zone, you will need to add it first.

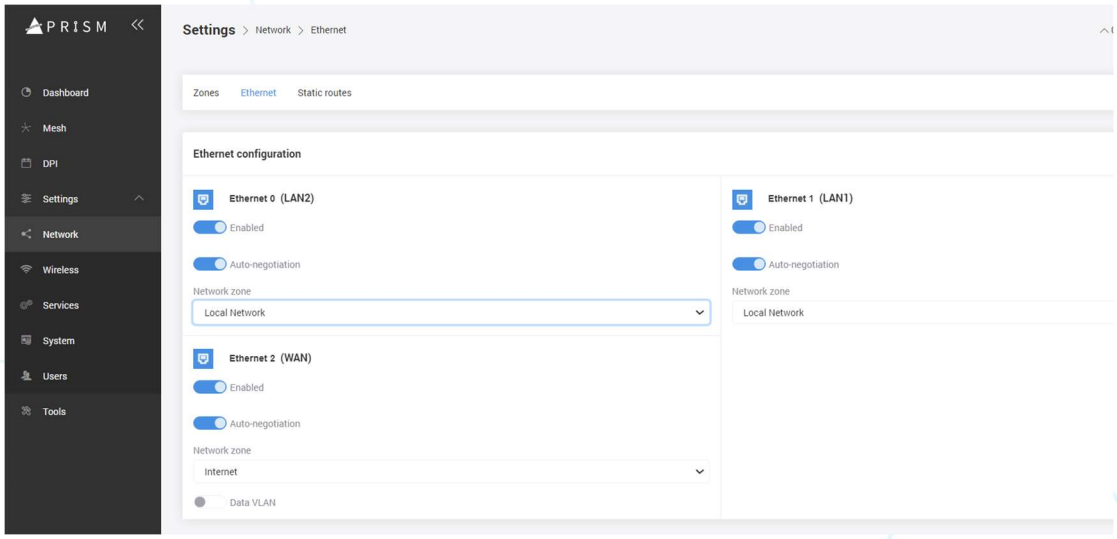
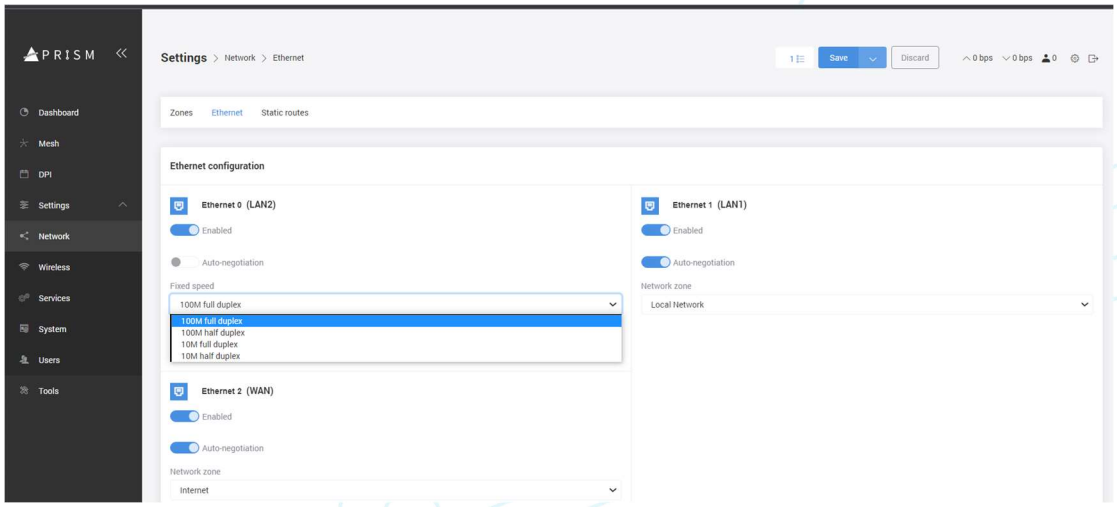
4. You can also configure the duplex mode and bandwidth for each Ethernet port by disabling auto-negotiation. The supported options include 100 Mbps full duplex, 100 Mbps half duplex, 10 Mbps full duplex, and 10 Mbps half duplex for each Ethernet port.