How to add static routes for the device

Static routing is a form of routing that occurs when a router uses manually configured routing entries. These entries are added to the routing table by a network administrator. To add a static route for MI10 and MO10, please follow the steps below:

1. Access the device settings menu via Ethernet.
   (1) Configure your PC's IP setting to static and then set the IP address to any address from 192.168.19.2 to 192.168.19.250
   (2) Connect your PC's network port to the device WAN port.
   (3) Enter the IP address 192.168.19.1 in your browser.
   (4) In the PRISM login screen use the following login:
   Username: prism
   Password: prism

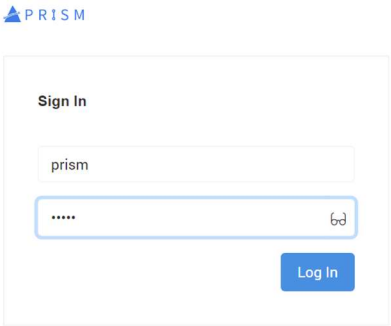

Note:
1. If the device IP address and username/password have been changed, please use the new IP address and username/password on how to login.
2. You can refer to the Quick Start Guide for more information to login device.

2. After logging in to the device's web GUI, navigate to the Settings/Network/Static routes to show the Static routes settings page.
3. Click the "+Add" button to add a new static route. Input the correct routing information and gateway. If you need to remove any entries, click the "X" button located on the right side of the list.

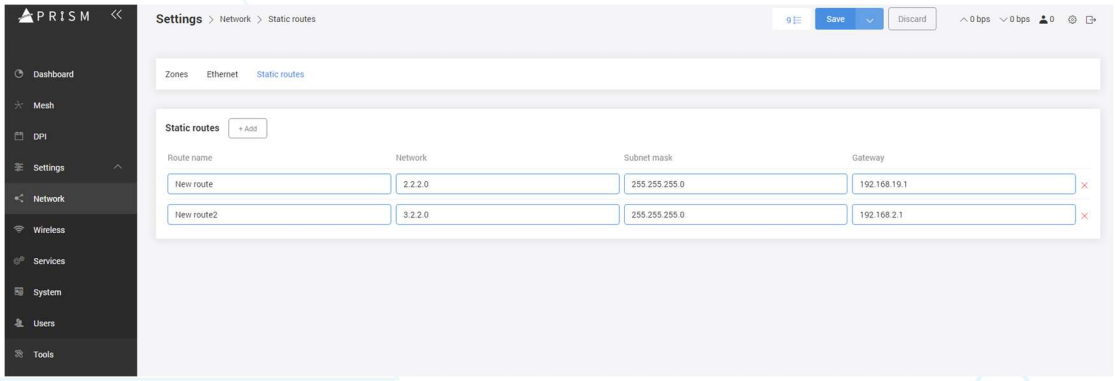
PRISM
Settings
Network
Static routes
Save
Discard
0 bps
0 bps
0
Dashboard
Mesh
DPI
Settings
Network
Wireless
Services
System
Users
Tools
Zones
Ethernet
Static routes
Static routes
+ Add
Route name
Network
Subnet mask
Gateway
New route
2.2.2.0
255.255.255.0
192.168.19.1
New route2
3.2.2.0
255.255.255.0
192.168.2.1