How to add wireless VAP

Wireless VAP stands for "Virtual Access Point." It is a virtual interface or a logical representation of a wireless access point created within a physical access point (AP). A wireless VAP allows the AP to broadcast multiple SSIDs and serve multiple wireless networks using the same physical hardware. You can follow the steps below to add or remove wireless VAP for MI10 and MO10.

1. Access the device settings menu via Ethernet.
   (1) Configure your PC's IP setting to static and then set the IP address to any address from 192.168.19.2 to 192.168.19.250
   (2) Connect your PC's network port to the device WAN port.
   (3) Enter the IP address 192.168.19.1 in your browser.
   (4) In the PRISM login screen use the following login:
   Username: prism
   Password: prism

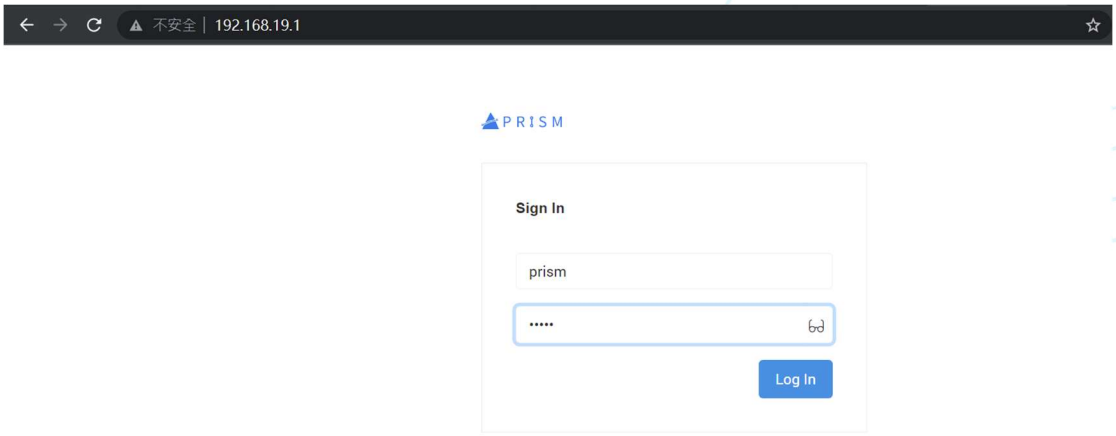

   Note:
   A. If the device IP address and username/password have been changed, please use the new IP address and username/password to login.
   B. You can refer to the Quick Start Guide for more information on how to login device.

2. After logging in to the device's web GUI, navigate to the Settings/Wireless/ Networks to show the wireless VAP settings page.
3. Click "+Add network" to add a new VAP, and you can set up the wireless parameters such as SSID, security type, network zone, enable on radio, etc.

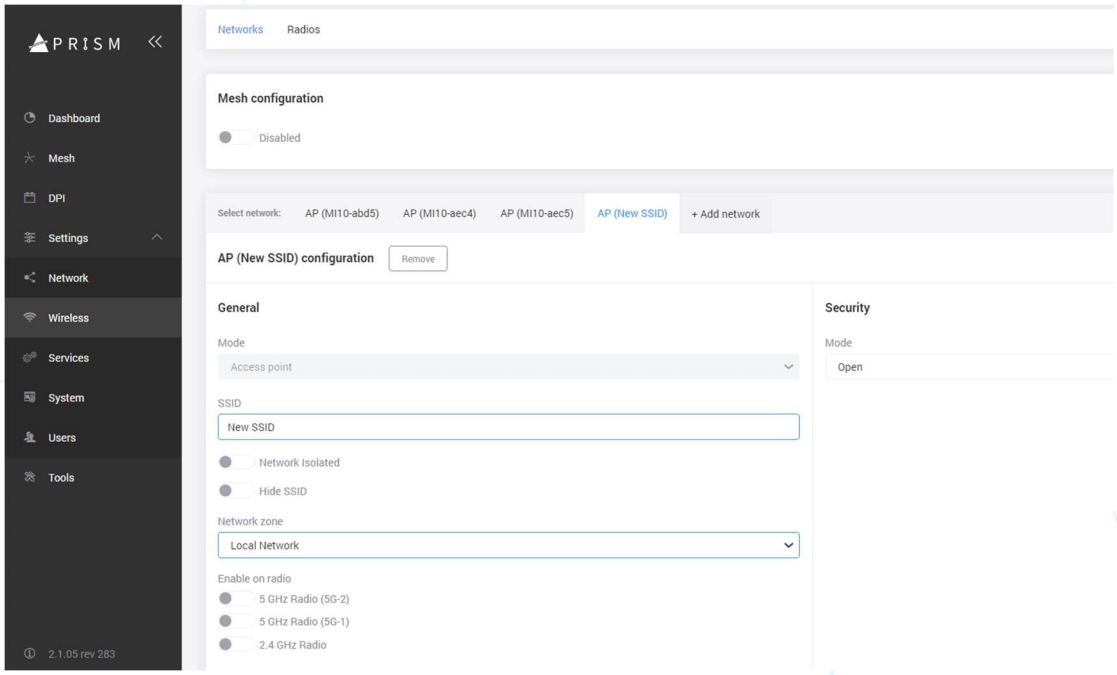

4. If you want to remove the VAP, select the VAP tab that you want to remove, and click “Remove”.
   Note: It is required to have at least one VAP, so you cannot remove all VAPs.