How to Enable or Disable Wireless Radio Interface

A wireless radio, in the context of computer networking, refers to the component in a networking device that enables wireless communication. It's the part responsible for transmitting and receiving data wirelessly between the networking device (such as a router or access point) and wireless-enabled devices like laptops, smartphones, and tablets. You can follow the steps below to enable/disable wireless radio for MI10 and MO10.

1. Access the device settings menu via Ethernet.
   (1) Configure your PC's IP setting to static and then set the IP address to any address from 192.168.19.2 to 192.168.19.250
   (2) Connect your PC's network port to the device WAN port.
   (3) Enter the IP address 192.168.19.1 in your browser.
   (4) In the PRISM login screen use the following login:
   Username: prism
   Password: prism

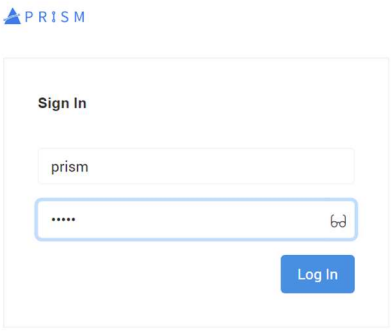

Note:
1. If the device IP address and username/password have been changed, please use the new IP address and username/password to login.
2. You can refer to the Quick Start Guide for more information on how to login device.

2. After logging in to the device's web GUI, navigate to the Settings/Wireless/Radio to show the wireless radio settings page.
3. Select the radio interface that you want to enable or disable.

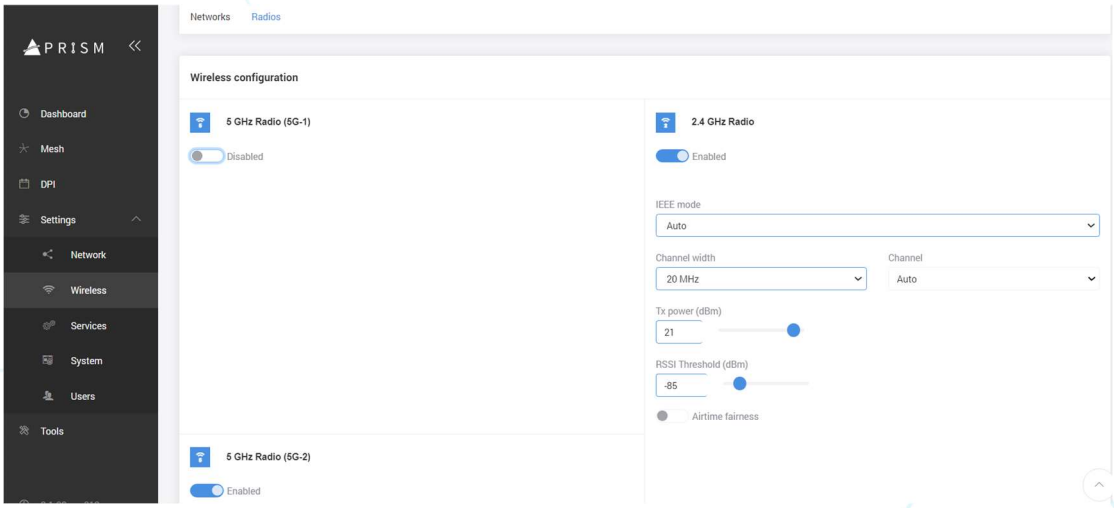

Note: If you disable the wireless radio interface, the AP won’t broadcast the SSID on that radio, and devices can't connect to the AP using that radio.