How to adjust the wireless Tx power

Wireless transmit power (Tx power) refers to the strength at which a wireless signal is transmitted by a device, such as a Wi-Fi router or access point. You can follow the steps below to adjust wireless Tx power for MI10 and MO10.

1. Access the device settings menu via Ethernet.
   (1) Configure your PC's IP setting to static and then set the IP address to any address from 192.168.19.2 to 192.168.19.250
   (2) Connect your PC's network port to the device WAN port.
   (3) Enter the IP address 192.168.19.1 in your browser.
   (4) In the PRISM login screen use the following login:
   Username: prism
   Password: prism

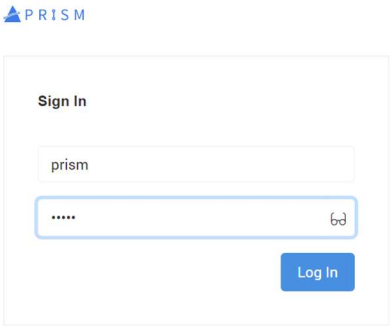

Note:
1. If the device IP address and username/password have been changed, please use the new IP address and username/password to login.
2. You can refer to the Quick Start Guide for more information on how to login device.

2. After logging in to the device's web GUI, navigate to the Settings/Wireless/Radio to show the wireless radio settings page.
3. Select the radio interface that you want to adjust the Tx power to adjust.

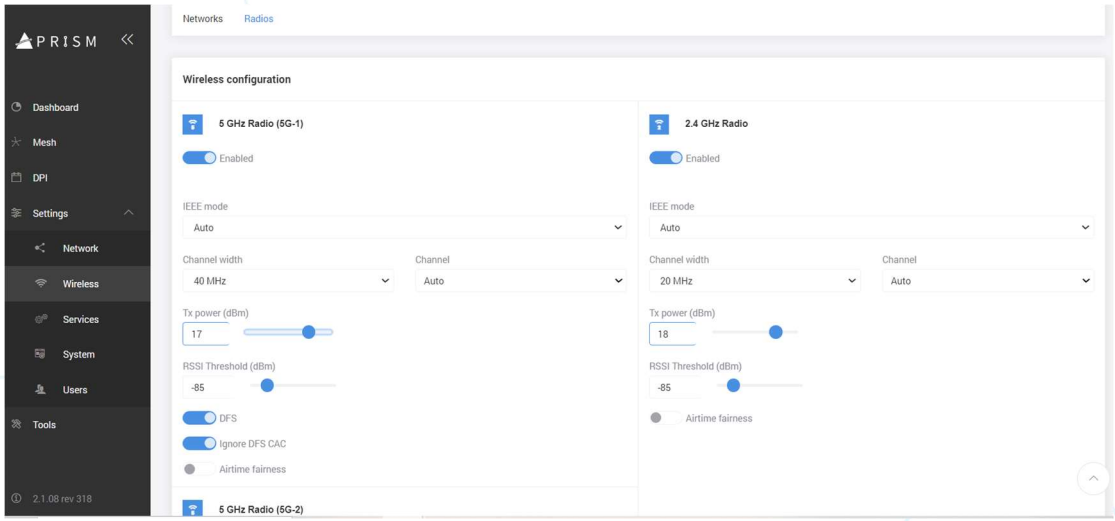

Note: It supports 3 to 21 for 5G-1, 3 to 22 for 2.4G, and 7 to 30 for 5G-2 interface for Tx power settings.