How to enable NTP service

Network Time Protocol (NTP) is a networking protocol designed to synchronize the clocks of computers and other devices within a network. You can follow the steps below to adjust NTP service for MI10 and MO10.

1. Access the device settings menu via Ethernet.
   (1) Configure your PC's IP setting to static and then set the IP address to any address from 192.168.19.2 to 192.168.19.250
   (2) Connect your PC's network port to the device WAN port.
   (3) Enter the IP address 192.168.19.1 in your browser.
   (4) In the PRISM login screen use the following login:
   Username: prism
   Password: prism

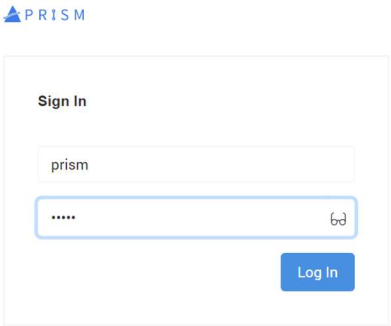

   Note:
   1. If the device IP address and username/password have been changed, please use the new IP address and username/password to login.
   2. You can refer to the Quick Start Guide for more information on how to login device.

2. After logging in to the device's web GUI, navigate to the Settings/Service/NTP to show the NTP settings page.

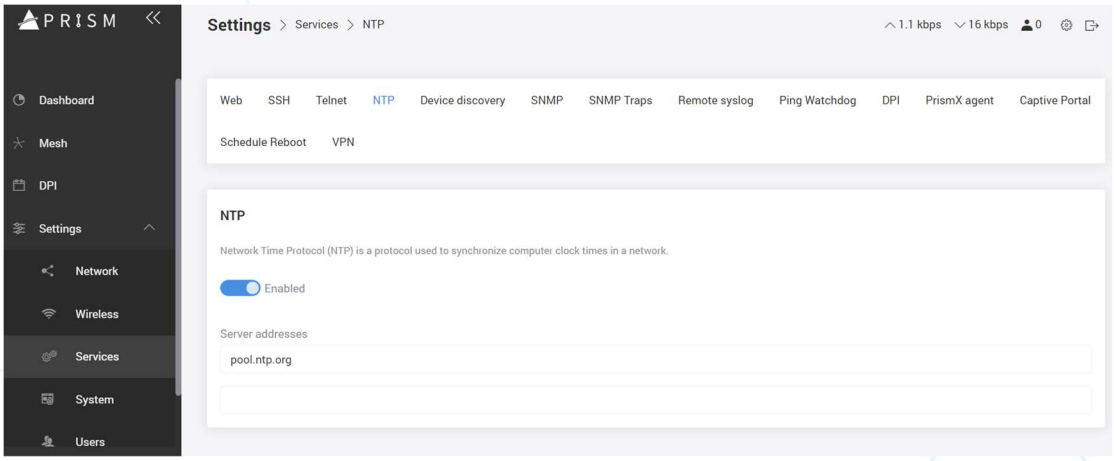

3. You can enable the NTP service to synchronize the clocks of the device within a network and edit the NTP server as you prefer.