How to enable SNMP settings

Simple Network Management Protocol (SNMP) is an application-layer protocol for monitoring and managing network devices on a local area network (LAN) or wide area network (WAN). The purpose of SNMP is to provide network devices such as routers, servers and printers with a common language for sharing information with a network management system (NMS). You can follow the steps below to adjust SNMP settings for MI10 and MO10.

1. Access the device settings menu via Ethernet.
   (1) Configure your PC's IP setting to static and then set the IP address to any address from 192.168.19.2 to 192.168.19.250
   (2) Connect your PC's network port to the device WAN port.
   (3) Enter the IP address 192.168.19.1 in your browser.
   (4) In the PRISM login screen use the following login:
   Username: prism
   Password: prism

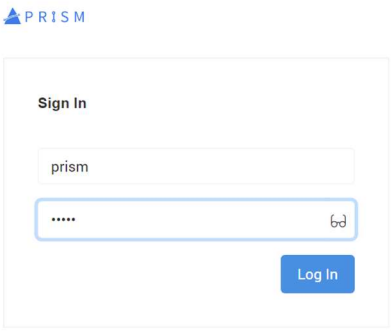

   Note:
   1. If the device IP address and username/password have been changed, please use the new IP address and username/password to login.
   2. You can refer to the Quick Start Guide for more information on how to login device.

2. After logging in to the device's web GUI, navigate to the Settings/Service/SNMP to show the SNMP settings page.

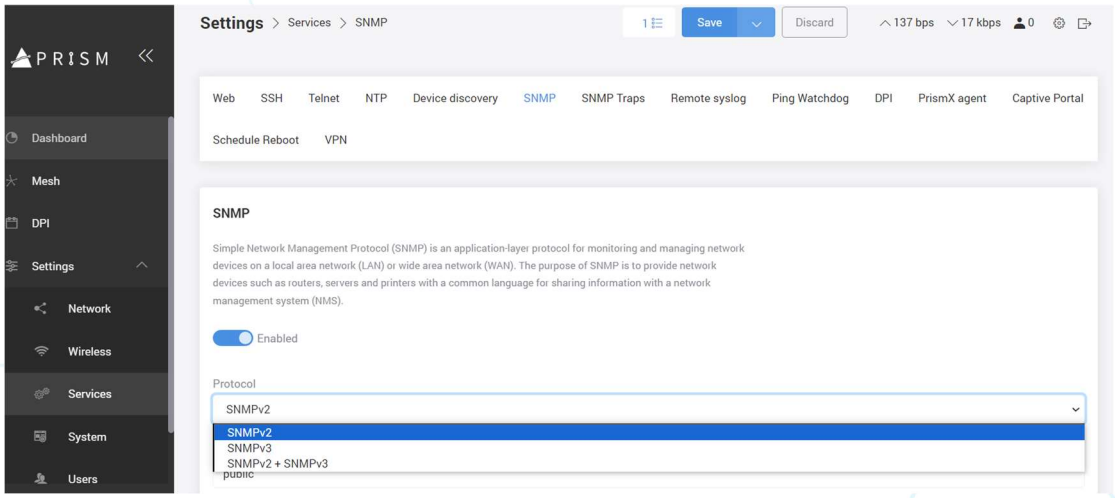

3. MI10 and MO10 support SNMPv2 and SNMPv3, you can set as you need.