How to setup remote syslog server

Syslog is a standard protocol used for message logging. It allows devices on a network to generate event messages and send them to a central logging server, called a syslog server. These messages can include information about system events, errors, warnings, and other diagnostic information. You can follow the steps below to setup remote syslog server for MI10 and MO10.

1. Access the device settings menu via Ethernet.
   (1) Configure your PC's IP setting to static and then set the IP address to any address from 192.168.19.2 to 192.168.19.250
   (2) Connect your PC's network port to the device WAN port.
   (3) Enter the IP address 192.168.19.1 in your browser.
   (4) In the PRISM login screen use the following login:
   Username: prism
   Password: prism

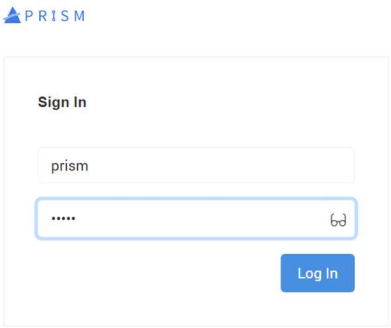

Note:
1. If the device IP address and username/password have been changed, please use the new IP address and username/password to login.
2. You can refer to the Quick Start Guide for more information on how to login device.

2. After logging in to the device's web GUI, navigate to the Settings/Service/Remote Syslog to show the Remote Syslog settings page.

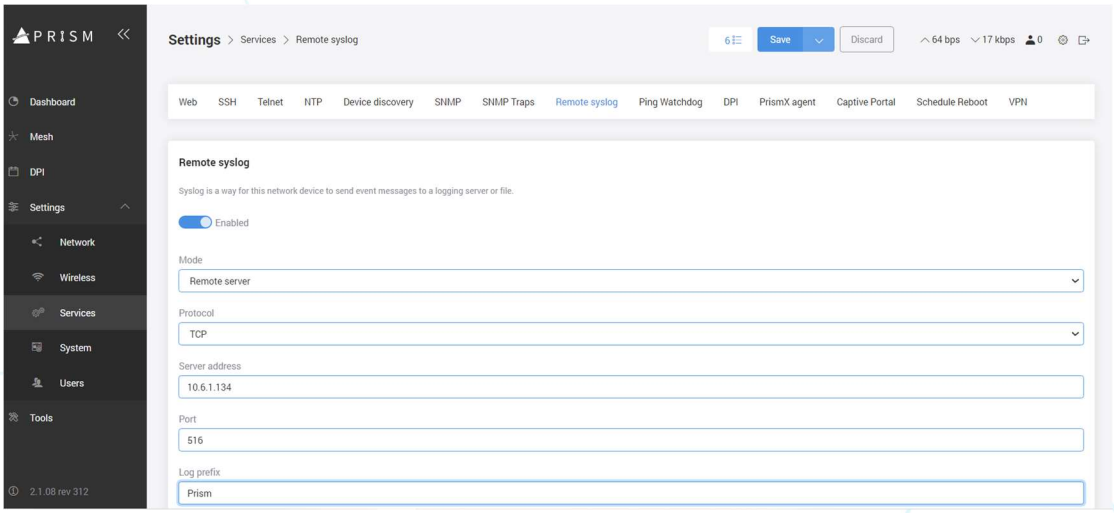

3. You can enable remote syslog with Instant logging to a file, Periodic logging to a file and logging to a remote server.
4. Suggest to set to logging to a remote server, you can find all the log message on server.