How to setup remote Ping Watchdog

The term "ping watchdog" typically refers to a mechanism that uses the "ping" command in a monitoring system to check the availability and responsiveness of a network device or server. You can follow the steps below to setup Ping Watchdog for MI10 and MO10.

1. Access the device settings menu via Ethernet.
   (1) Configure your PC's IP setting to static and then set the IP address to any address from 192.168.19.2 to 192.168.19.250
   (2) Connect your PC's network port to the device WAN port.
   (3) Enter the IP address 192.168.19.1 in your browser.
   (4) In the PRISM login screen use the following login:
   Username: prism
   Password: prism

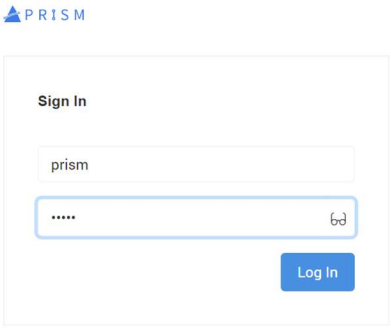

   Note:
   1. If the device IP address and username/password have been changed, please use the new IP address and username/password to login.
   2. You can refer to the Quick Start Guide for more information on how to login device.

2. After logging in to the device's web GUI, navigate to the Settings/Service/Ping Watchdog to show the Ping Watchdog settings page.

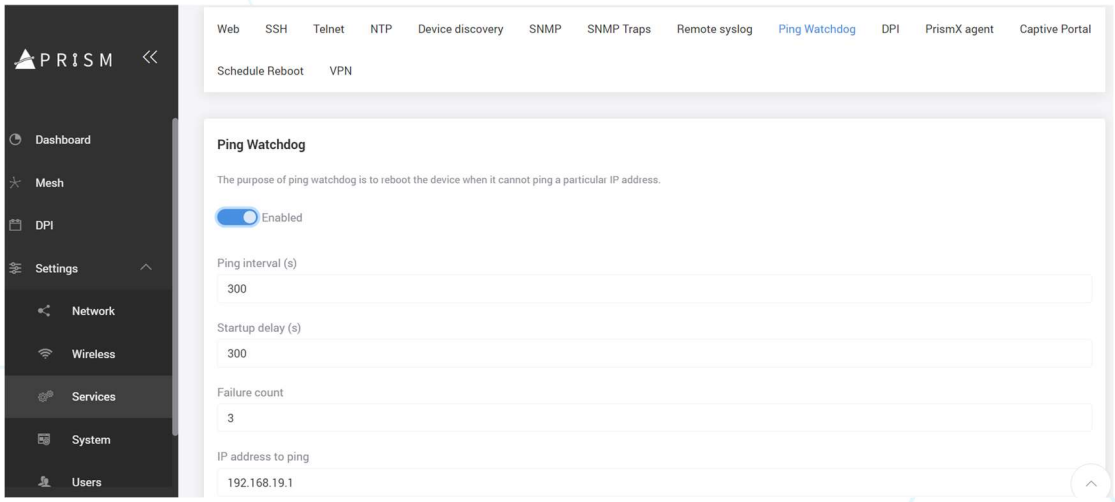

3. You can enable Ping Watchdog function to ping a specific IP address, and once it doesn't reply, the device would reboot automatically.