How to setup Schedule reboot

"Scheduled reboot" refers to the practice of automatically restarting a system or device at specified intervals or on a predetermined schedule. You can follow the steps below to setup Schedule Reboot for MI10 and MO10.

1. Access the device settings menu via Ethernet.
   (1) Configure your PC's IP setting to static and then set the IP address to any address from 192.168.19.2 to 192.168.19.250
   (2) Connect your PC's network port to the device WAN port.
   (3) Enter the IP address 192.168.19.1 in your browser.
   (4) In the PRISM login screen use the following login:
   Username: prism
   Password: prism

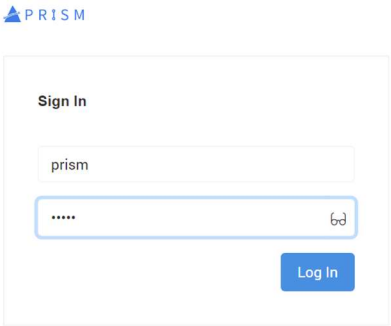

Note:
1. If the device IP address and username/password have been changed, please use the new IP address and username/password to login.
2. You can refer to the Quick Start Guide for more information on how to login device.

2. After logging in to the device's web GUI, navigate to the Settings/Service/Schedule Reboot to show the Schedule Reboot settings page.

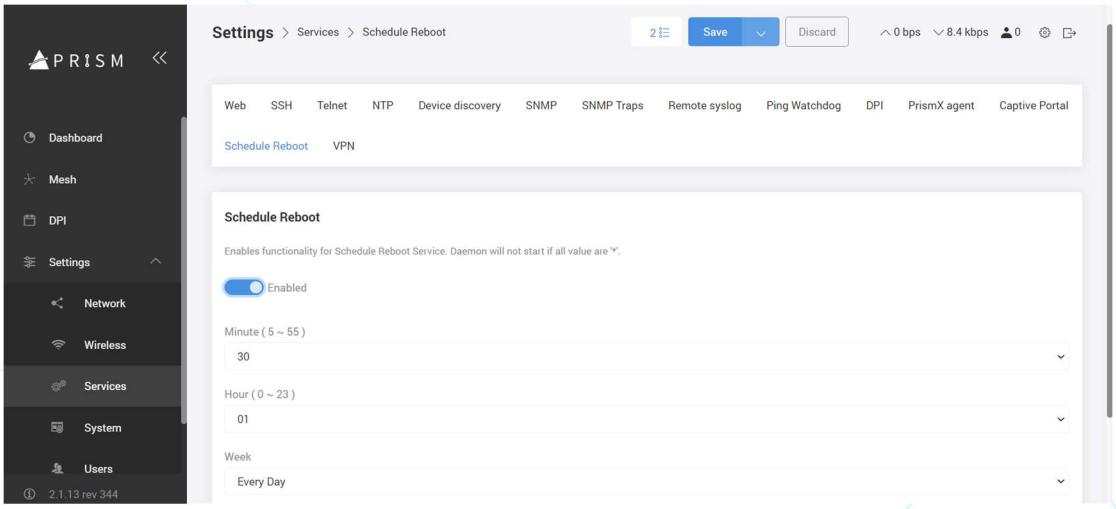

3. You can schedule the device to reboot every day or once a week at a specific time.