How to setup system time

NTP stands for Network Time Protocol. It is a networking protocol used to synchronize the clocks of computer systems over a network. The primary goal of NTP is to ensure that all devices on a network agree on the current time, even if their internal clocks may have some inherent drift. You can follow the steps below to setup system time and NTP server for MI10 and MO10.

1. Access the device settings menu via Ethernet.
   (1) Configure your PC's IP setting to static and then set the IP address to any address from 192.168.19.2 to 192.168.19.250
   (2) Connect your PC's network port to the device WAN port.
   (3) Enter the IP address 192.168.19.1 in your browser.
   (4) In the PRISM login screen use the following login:
   Username: prism
   Password: prism

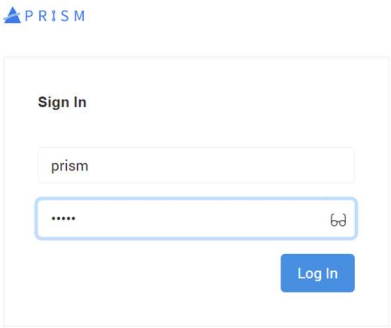

Note:
1. If the device IP address and username/password have been changed, please use the new IP address and username/password to login.
2. You can refer to the Quick Start Guide for more information on how to login device.

2. After logging in to the device's web GUI, navigate to the Settings/System to show the System settings page.

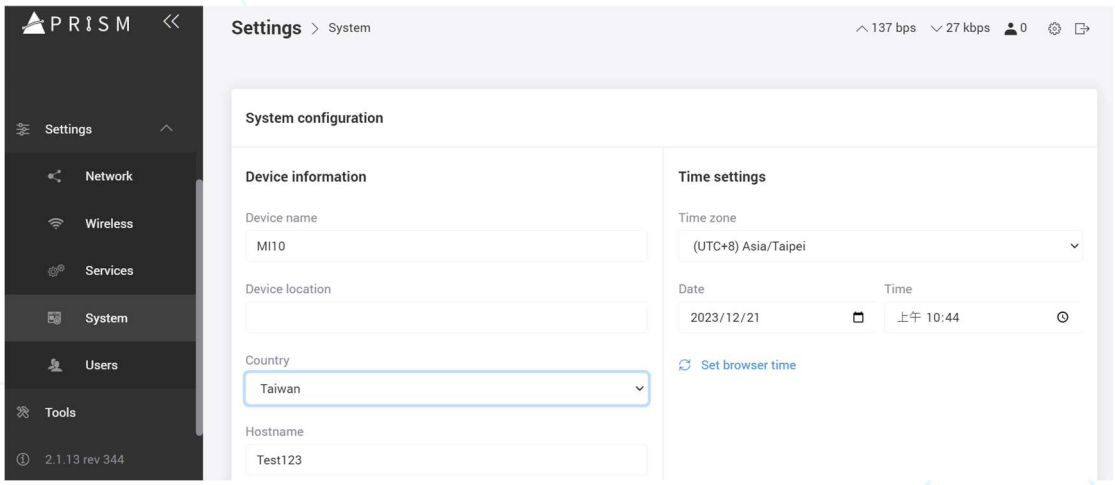

3. You can manually change the Date and Time settings or press “Set browser time” to sync the device system time to your operating system.
   Note: If you enable NTP on Services/NTP, the system time would sync with the NTP server according to the Time zone setting automatically.