How to disable the physical reset function

1. Access the device settings menu via Ethernet.
   (1) Configure your PC's IP setting to static and then set the IP address to any address from 192.168.19.2 to 192.168.19.250
   (2) Connect your PC's network port to the device WAN port.
   (3) Enter the IP address 192.168.19.1 in your browser.
   (4) In the PRISM login screen use the following login:
   Username: prism
   Password: prism

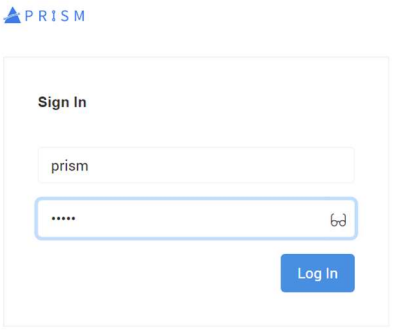

   Note:
   1. If the device IP address and username/password have been changed, please use the new IP address and username/password to login.
   2. You can refer to the Quick Start Guide for more information on how to login device.

2. After logging in to the device's web GUI, navigate to the Settings/System to show the System settings page.

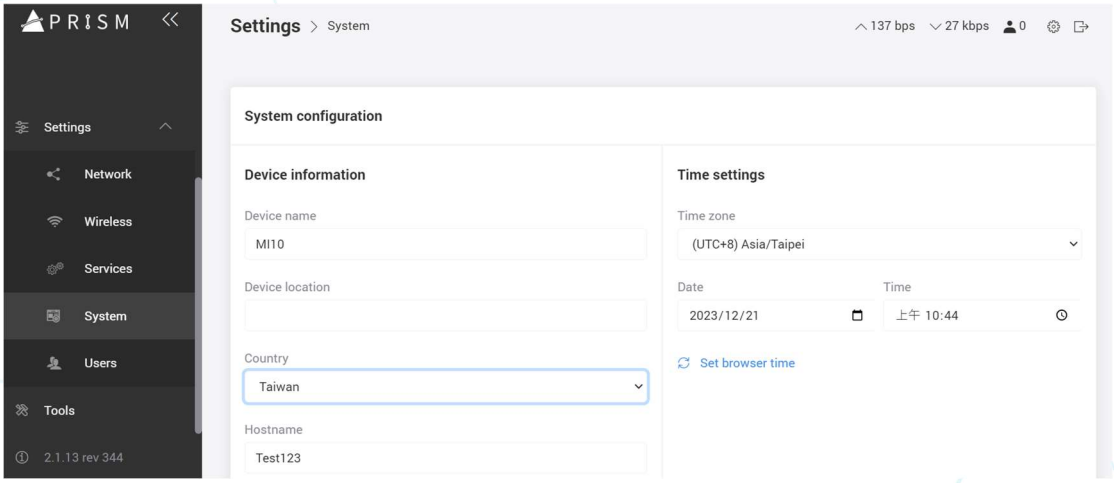

3. You can disable or enable Physical reset button function at Other settings field.

   Note: 1) The default settings of Physical reset button function is enabled

   2) If you disable the Physical reset button, it would not be able to reset the device to factory default settings when you press and hold the physical reset button for 10 seconds. Suggest not to disable this function.