How to change the login username and passwords

1. Access the device settings menu via Ethernet.
   (1) Configure your PC's IP setting to static and then set the IP address to any address from 192.168.19.2 to 192.168.19.250
   (2) Connect your PC's network port to the device WAN port.
   (3) Enter the IP address 192.168.19.1 in your browser.
   (4) In the PRISM login screen use the following login:
   Username: prism
   Password: prism

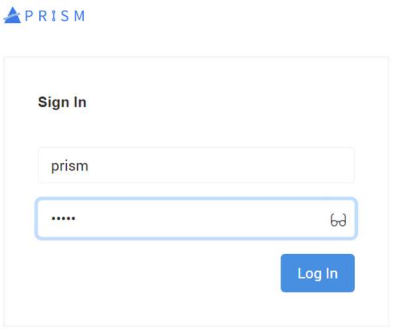

   Note:
   1. If the device IP address and username/password have been changed, please use the new IP address and username/password to login.
   2. You can refer to the Quick Start Guide for more information on how to login device.

2. After logging in to the device's web GUI, navigate to the Settings/Users to show the Users settings page.

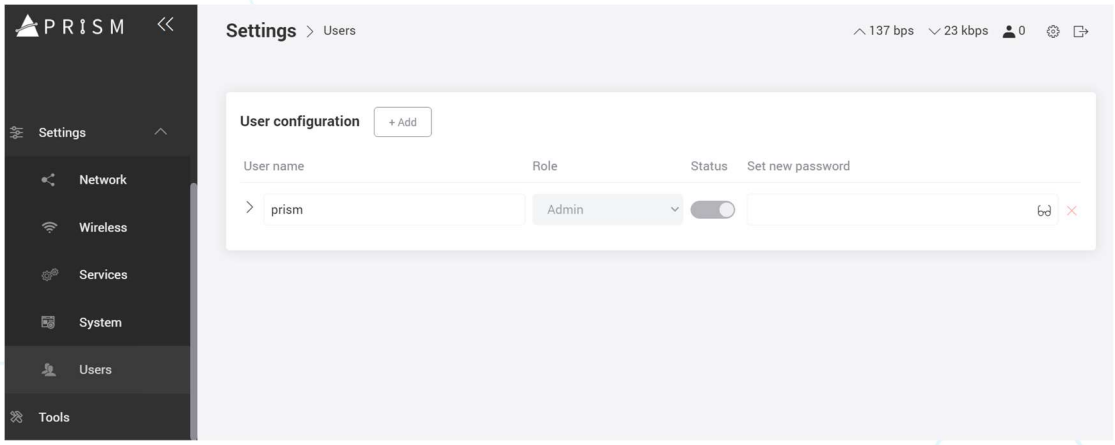

3. You can add or edit the users with User name, Role and password for the login users.
4. There are 3 levels for user authority.
   Admin with the highest authority for full control for the device.
   Installer with the most control except “Users” for the device.
   Observer with only the viewer permission for Dashboard.

   Note: You cannot disable or delete the initial user with administrative privileges; however, you can still edit its name and password.