How to change the login username and passwords

1. Access the device settings menu via Ethernet.
   (1) Configure your PC's IP setting to static and then set the IP address to any address from 192.168.19.2 to 192.168.19.250
   (2) Connect your PC's network port to the device WAN port.
   (3) Enter the IP address 192.168.19.1 in your browser.
   (4) In the PRISM login screen use the following login:
   Username: prism
   Password: prism

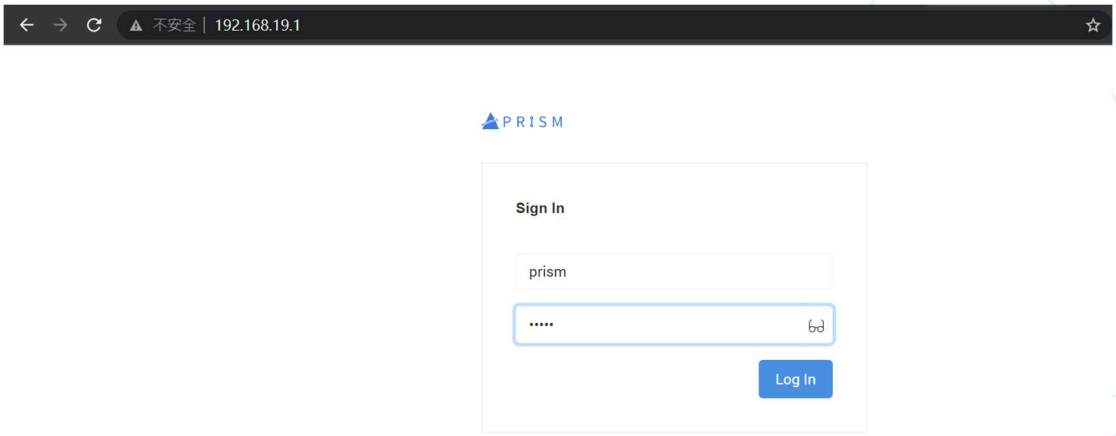

   Note:
   1. If the device IP address and username/password have been changed, please use the new IP address and username/password to login.
   2. You can refer to the Quick Start Guide for more information on how to login device.

2. After logging in to the device's web GUI, navigate to the Tools/Site Survey to show the Site Survey page.

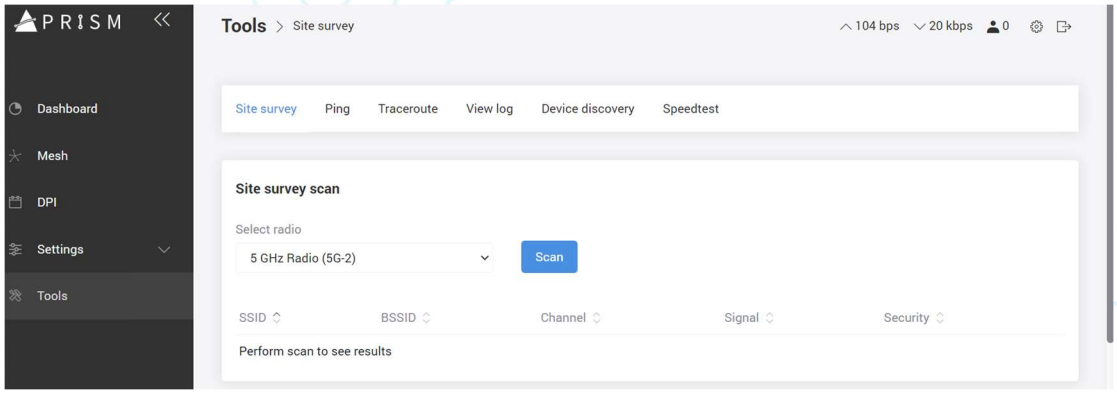

3. Select the radio interface that you want to sue to run Site Survey and press "Scan" to start.
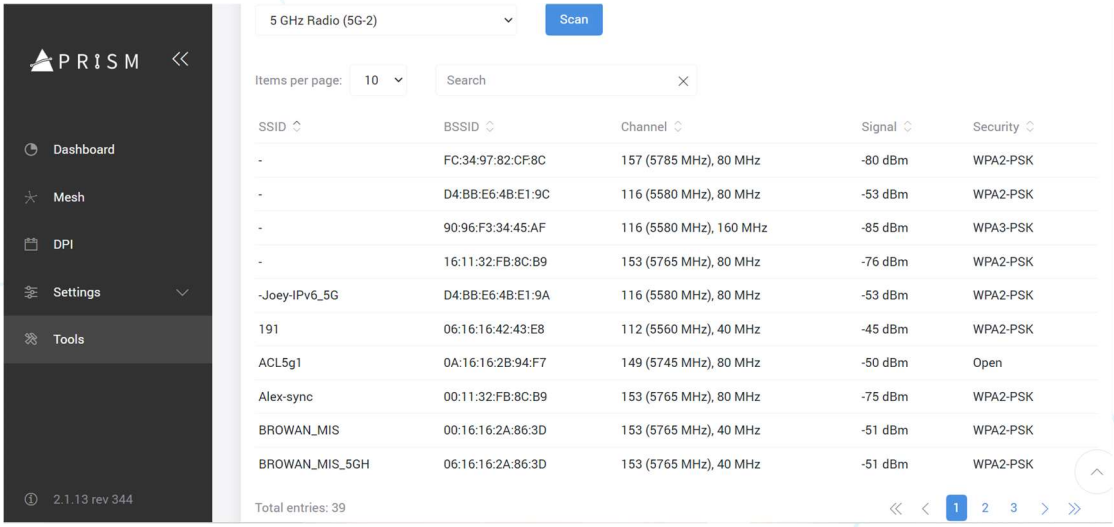
4. It will show the results for the nearby Wi-Fi network with SSID, BSSID, Channel, Signal and Security type.