How to run Speedtest to check the download and upload speed of internet access for the AP

Speedtest is used to measure the speed of an internet connection. You can follow the steps below to run Speedtest for MI10 and MO10.

1. Access the device settings menu via Ethernet.
   (1) Configure your PC's IP setting to static and then set the IP address to any address from 192.168.19.2 to 192.168.19.250
   (2) Connect your PC's network port to the device WAN port.
   (3) Enter the IP address 192.168.19.1 in your browser.
   (4) In the PRISM login screen use the following login:
   Username: prism
   Password: prism

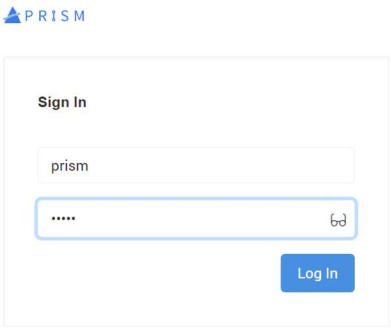

Note:
1. If the device IP address and username/password have been changed, please use the new IP address and username/password to login.
2. You can refer to the Quick Start Guide for more information on how to login device.

2. After logging in to the device's web GUI, navigate to the Tools/Speedtest to show the Speedtest page.

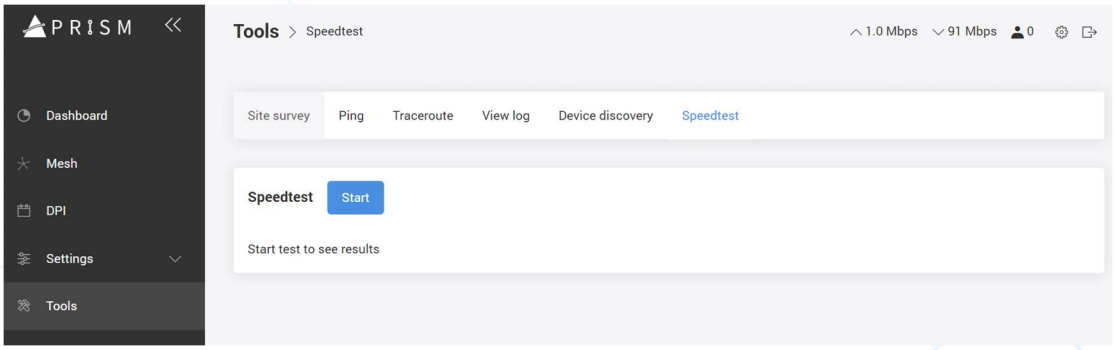
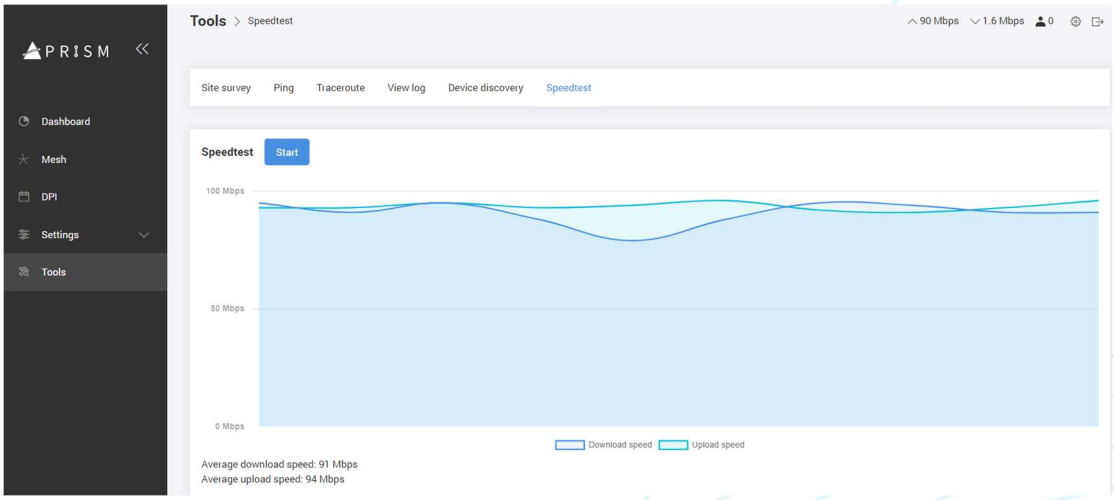
3. Press “Start” to run the speedtest to check the download and upload speed of Internet access.